


Cuisinart®

CARE & SAFETY INSTRUCTIONS

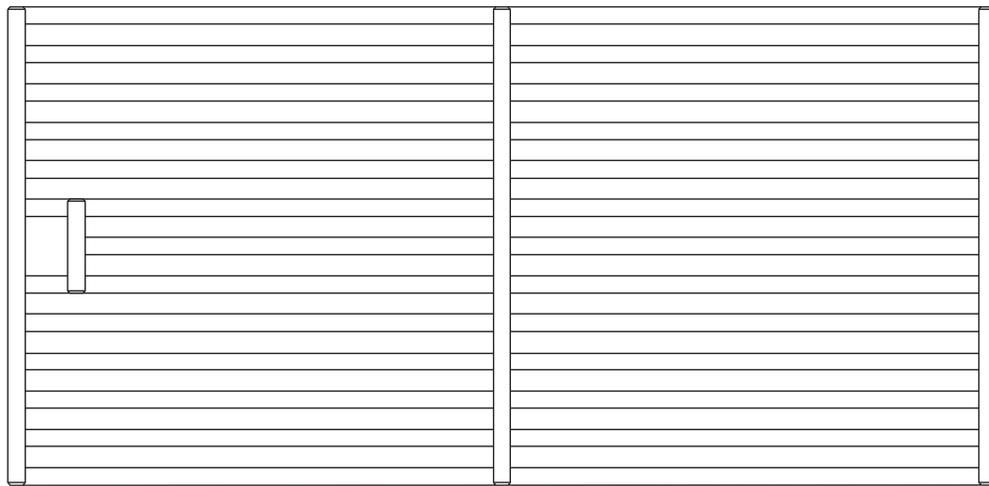

OEM Gourmet Stainless Steel Cooking Grate

85-2336 (G535-0044-02)

EXACT FIT FOR CUISINART® CERAMIC AND GOURMET MODELS:

85-3056 (G52501), 85-3057-6 (G52502), 85-3058-4 (G52503), 85-3059-2 (G52504),
85-3056-8 (G52505), 85-3057-6 (G52506), 85-3058-4 (G52507), 85-3059-2 (G52508),
85-3058-4 (G52509), 85-3059-2 (G52510), 85-3108-6 (G53501), 85-3109-4 (G53502),
85-3110-8 (G53503), 85-3111-6 (G53504), 85-3122-0 (G53505), 85-3123-8 (G53506),
85-3126-2 (G53507), 85-3127-0 (G53508)

READ AND SAVE MANUAL FOR FUTURE REFERENCE.

The Cuisinart® OEM Stainless Steel Cooking Grate is designed and intended for use with Cuisinart® Ceramic and Gourmet barbecues only. This product will replace the original cooking grate sold with your Cuisinart® Ceramic or Cuisinart® Gourmet barbecue.

CARE AND MAINTENANCE

Please follow the care and maintenance tips provided below for optimal cooking performance, durability, and food safety. To protect the appearance and integrity of your stainless steel grates, routine cleaning is essential.

ROUTINE CLEANING

- **With every use**, brush off all build-up on the cooking grates, prior to lighting your barbecue. DO NOT use a steel brush or steel wool brush to clean your stainless steel grates. This will scratch the finish and leave particles embedded on the surface that will corrode.
- **Following every cook**, always perform a burn-off of your cooking grates by turning the temperature on "HIGH", for 5 minutes.

SEASONAL MAINTENANCE

1. **Remove** cooking grates from barbecue and wash with soap and water.
2. **Rinse** and dry thoroughly with a microfiber towel.
3. **Place** cooking grates on barbecue and preheat as recommended.

For more information
please visit us online at www.cuisinartbbqs.com

Join the conversation



facebook.com/cuisinartbbqs



twitter.com/cuisinartbbqs